



Contrast and Brightness:

Use these controls to adjust the screen brightness to compensate for room lighting. Rotate either or both controls clockwise to increase brightness; rotate counterclockwise to decrease brightness.

Power ON/OFF

To turn on the VGM-220, press POWER. The POWER indicator lights. Press POWER again to turn off the monitor.

Vertical Size:

Controls are factory-adjusted and usually do not require further adjustment.

If the display's vertical size is not correct, contact a Radio Shack service technician. Or, if you are familiar with this type of adjustment and want to make the adjustment yourself, use a plastic alignment tool to adjust the vertical size of each display mode as follows:

Vertical Size 1:

Use this control to adjust the vertical size of the display for Mode 1.

Vertical Size 2:

Use this control to adjust the vertical size of the display for Mode 2.

Vertical Size 3:

Use this control to adjust the vertical size of the display for Mode 3.

CAUTION: If the same characters or graphics are shown for a long time with the contrast and brightness controls set to their maximum positions, part of the screen might be damaged.

(smm 08/24/93)